


## Installation instruction

### *Awning post base (outside installation).*

AWNING POST BASE: AWB60A, AWB60AX, AWB80X.

AWNING POST BASE ACCESSORIES: AWB6001, AWB6002, AWB8001, AWB8002.

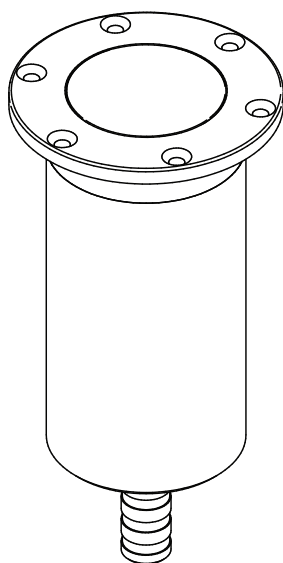

**CAUTION.** Read all instructions carefully before installing and using this product.

#### 1. REQUIRED FOR INSTALLATION.



Template



Drill



Hole saw



Non acidic degreaser



Polyurethane marine sealant



Anti-corrosion lubricant



Threadlocker


## Installation instruction

### *Awning post base (outside installation).*

#### 1. TEMPLATE.


Choose the right template and mark position of base and screws on the deck (see templates at page 05). Use a hole saw to cut holes for the base and a drill bit to cut holes for screws. Reinforce the fixing surface adequately (see "Maximum bending moment table").

| Type             |  |  |  |
|------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| AWB60A / AWB60AX | print P.05                                                                        | Ø 6,5 mm                                                                          | Ø 81 mm                                                                           |
| AWB80X           | print P.05                                                                        | Ø 8,5 mm                                                                          | Ø 111 mm                                                                          |

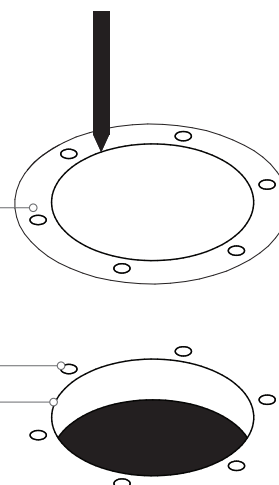


Maximum bending moment\* table (applied on the fixing surface):

| Pole length (mm) | Max b. m.* (N·m)<br>AWB60A / AWB60AX | Max b. m.* (N·m)<br>AWB80X |
|------------------|--------------------------------------|----------------------------|
| 1400             | 2100                                 |                            |
| 1500             | 2250                                 |                            |
| 1600             | 2400                                 |                            |
| 1700             | 2550                                 | 3400                       |
| 1800             | 2700                                 | 3600                       |
| 1900             | 2850                                 | 3800                       |
| 2000             | 3000                                 | 4000                       |
| 2400             |                                      | 4800                       |

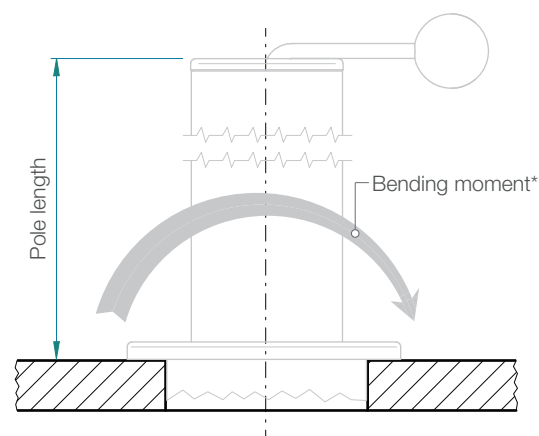

#### 2. PREPARING THE BASE.

Carefully clean the bottom side of the base, apply a small bead of marine sealant under the flange / on the deck. We recommend to use anti-corrosion lubricant into the screw holes.

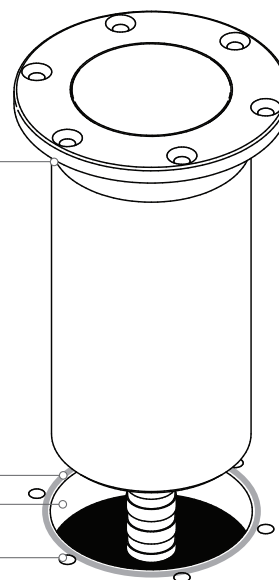

## Installation instruction

### *Awning post base (outside installation).*

#### 3. INSTALLATION.


Place the base into the deck, then place the screws.

Use washers (or backing plate, if needed) between screws and nuts and tighten firmly.


To glue the optional cover to the base, use some marine sealant.




AWB6001 / AWB8001

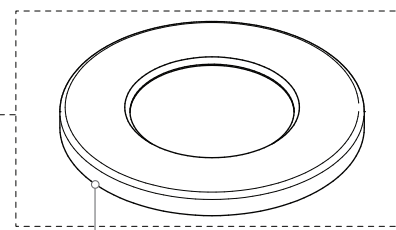



(1)

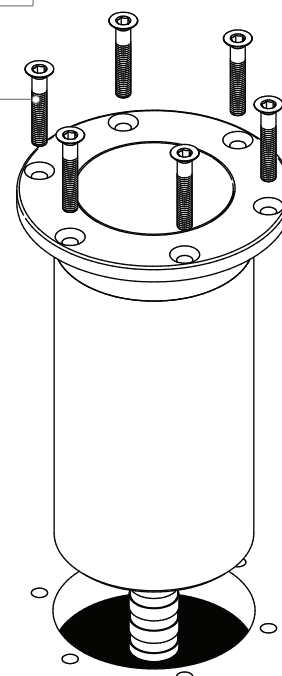

AWB6002 / AWB8002

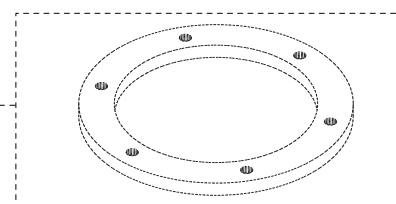

(2)

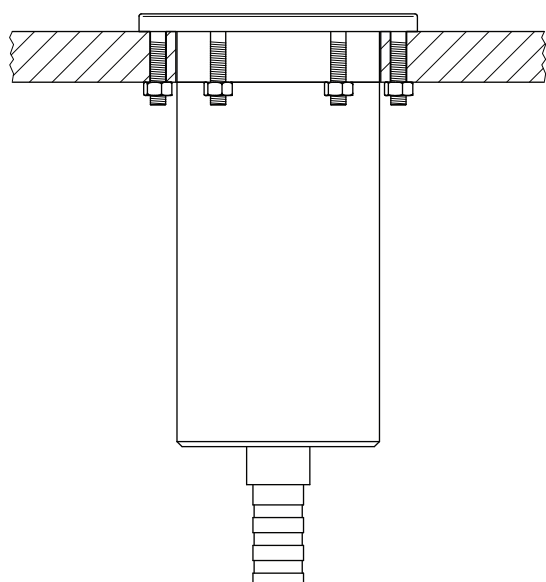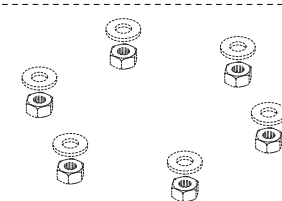

## Installation instruction



### *Awning post base (outside installation).*

#### 4. DRAINAGE


Connect the hose fitting into the base base and connect the drain pipe (the hose fitting can be mounted before to install the socket).



| Type                      | Pipe internal diameter (mm) |
|---------------------------|-----------------------------|
| AWB60A / AWB60AX / AWB80X | Ø 20                        |

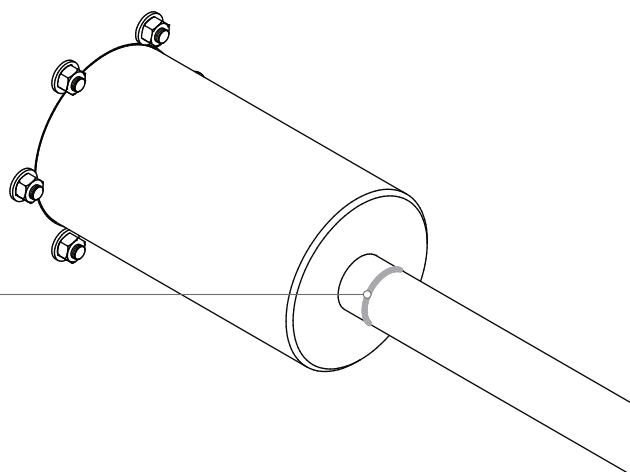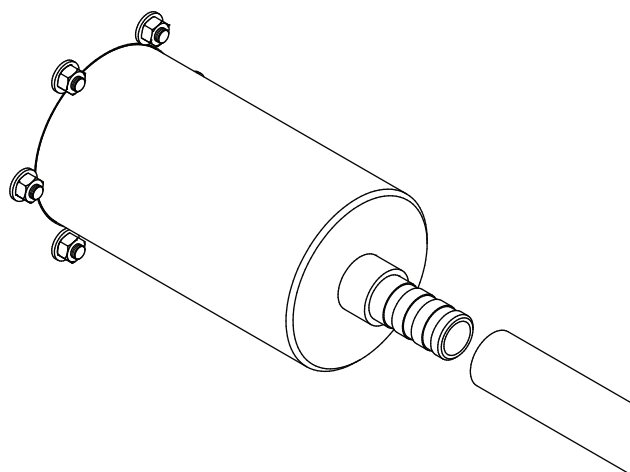

  
AWB60A  
AWB60AX

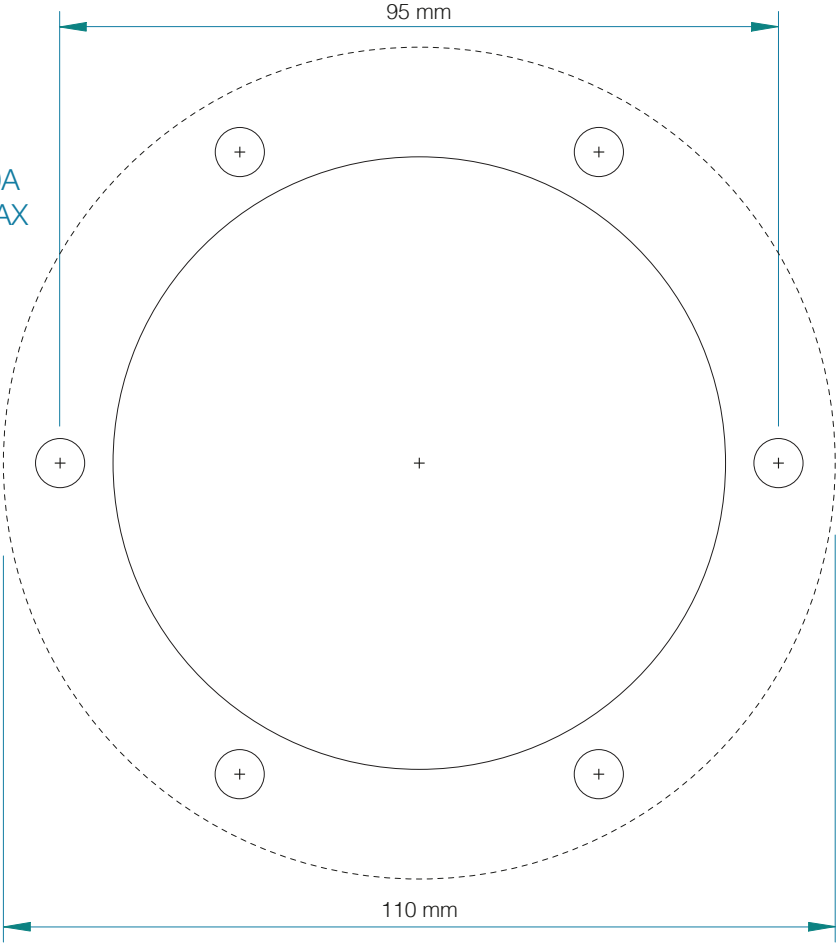

  
AWB80X

